 



# **128 COMMAND CENTER** Installation Guide

\*\*\*\*\*  
\*  
\* **WARNING: DO NOT ATTEMPT INSTALLATION WITH COMMAND CENTER PLUGGED IN** \*  
\*  
\*\*\*\*\*

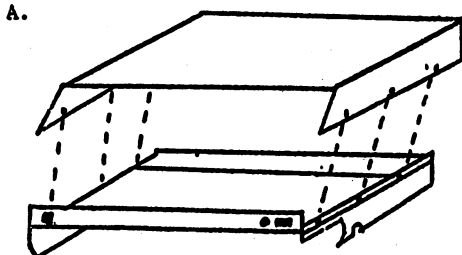

1. Remove top from unit. (Illus. A)
2. Place drive(s) on drive support. Be sure that they are moved forward so the front panel butts against them. (Illus. B)

 IF YOU HAVE ONLY ONE DRIVE GO TO STEP 9

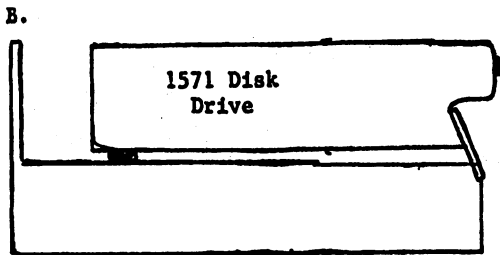

Side View

3. Plug the drive power cable(s) into outlet(s) on the back panel and feed the other end(s) through the cable port and plug them into the drive(s). Turn the drives to the ON position. (Illus. C & D)

4. Plug the drive serial cable(s) into the drive(s) and feed the computer end under the drive support and out the front of the unit.


5. Plug your monitor and printer power cords into outlets on the back panel. Next run the system cables through the cable port of the back panel. Feed the monitor cable under the drive support, and out the front of the unit. Do the same with the power supply cord, except run the end through the small hole on the right side of the unit. Connect the printer cable to the drive. (Illus. D-E)

IF YOU HAVE A MODEM GO TO STEP 10



6. Place the CPU in front of the unit. Connect all of the cables to the appropriate ports on the CPU. Turn all peripheral power switches to the ON position. (Slide the CPU into the unit.) (Illus E)


7. Attach the top to the unit using the screws supplied.

8. Connect the main power cord to the back panel and a wall outlet.

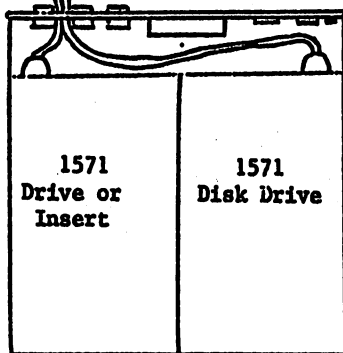

Top View of Command Center

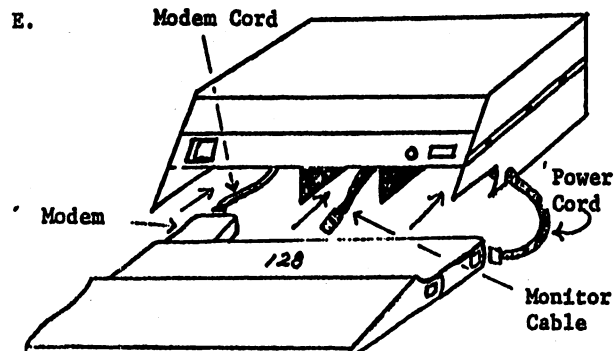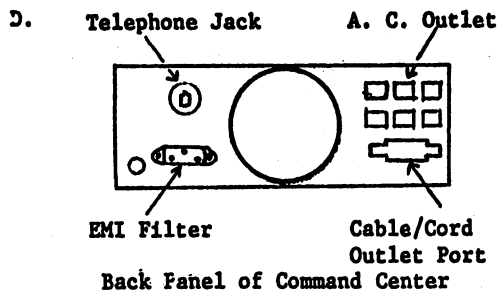

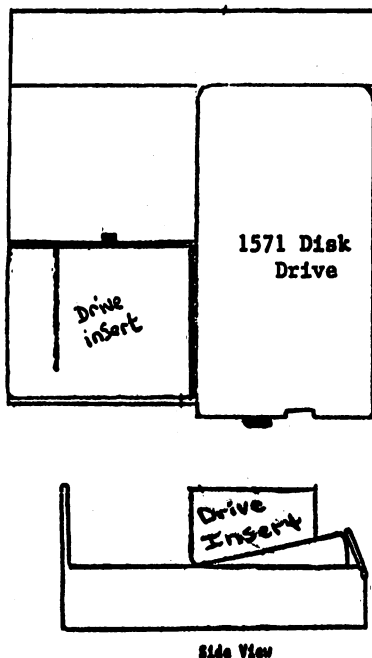

9. If you have only one drive, the drive must be placed on the right side of unit. Place the Drive Insert (included with the Command Center) in the left side of the unit. Stick the adhesive label over the vent holes on the left side of the top from the inside (Return to step 3).
10. Put your modem into the port on your CPU. Connect the modem line in the unit to the modem. Switch the communication switch on the modem to the telecommunications position. Connect your main telephone line to the telephone jack on the back of the unit. (Illus D). You may now use your modem with the switch on the front plate. When the modem is not being used, leave the switch in the phone position. (Return to step 6).

\*\*\*\*\*

#### LIMITED WARRANTY 128 COMMAND CENTER

KETEK warrants this product to be free from defects in material and/or workmanship for a period of one year from the original date of purchase by the buyer. ~~The foregoing is KETEK's total responsibility under this warranty, and any liability for incidental or consequential damages, is expressly disclaimed.~~

ALL EXPRESS AND IMPLIED WARRANTIES FOR THIS PRODUCT, INCLUDING THE WARRANTIES ON MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO A PERIOD OF ONE YEAR FROM THE DATE OF PURCHASE AND NO WARRANTIES EITHER EXPRESS OR IMPLIED WILL APPLY AFTER THIS PERIOD. This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.

#### HOW TO RETURN PRODUCT FOR SERVICING

The product may be returned to the dealer from whom you purchased it. The dealer will then make arrangements for obtaining the warranty service needed. If the product was purchased directly from KETEK or your dealer is not available, it may be returned directly to KETEK. To return the product to KETEK a return authorization number must be obtained by calling (319) 338-7123. The operator will give instructions on how to return the product. Not obtaining a return authorization may cause a delay in receiving warranty service.

All requests for warranty service must include the buyer's purchase receipt or other valid proof of date of original consumer purchase, including the serial number of the product. Any postage, insurance or shipping costs incurred in presenting or sending the product for service is the sole responsibility of the buyer.