

KOALAPainter COMMODORE 64: CARTRIDGE VERSION

SYSTEM REQUIREMENTS

- Commodore 64 Computer
- KoalaPainter Cartridge
- Color TV or Monitor
- KoalaPad Touch Tablet and Stylus
- Commodore 1541 Disk Drive (required only if you want to save your pictures)

Getting Started:

- Make sure your computer is turned off.
- Turn on your disk drive (if so equipped).
- Turn on your television or monitor.
- Insert the KoalaPainter cartridge into the Commodore 64's cartridge slot, with the label facing upward.
- Turn on your computer.
- You will see the KoalaPainter title screen display on your television or monitor. You can wait for it to finish painting, and it will go to the menu automatically. Or, after a few seconds, you can press one of the KoalaPad buttons and the menu will appear more quickly.

Turn to page 2 of the manual for further instructions.