


ULTIMATE[®] superstick[®] OWNER'S MANUAL

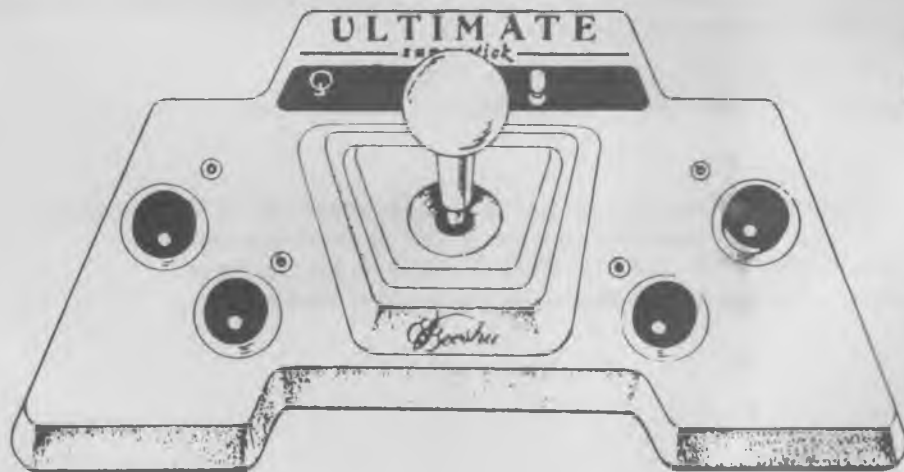

Player's Seal of Approval



The U.S.
National
Video Game
Team has
endorsed this
product in
recognition
of its
superior play
value.

 Commodore[®]

AMIGA[®]

ATARI[®]

CONNECTING YOUR **ULTIMATE** **==superstick==**

- Disconnect any existing joystick.
- Make sure your Ultimate® plug lines up with game port.
- Push plug all the way into the game port.
- When disconnecting your joystick, ALWAYS pull the plug, NOT the cord.
- When connecting or disconnecting plug make sure unit is turned OFF.

PROPER CARE AND MAINTENANCE OF YOUR **ULTIMATE** **==superstick==**

- Keep in a dry, clean area.
- When operating, make sure your hands are clean. Use only a damp, soft cloth to clean your Ultimate®.
- Do not use abrasives, solvents or alcohol to clean.
- Avoid exposure to high temperatures and do not drop your Ultimate®.

FEATURES OF YOUR **ULTIMATE** **==superstick==**

- **DIAL-A-SPEED:** You may adjust both 'A' & 'B' buttons to "AUTO-FIRE" by turning the dial. Turning clockwise increases the firing speed (note: or some games, "AUTO-FIRE" must be in the 'OFF' position - counter clockwise - in order to obtain maximum playability).

You will notice that one set of L.E.D.'s will "Blink" as you turn on the DIAL-A-SPEED™. This indicates the fire power rate. When DIAL-A-SPEED™ is fully turned on - L.E.D.'s will constantly be on when fire button is engaged.

- **FIRE/JUMP Buttons:** There are two sets of buttons for left or right hand play. Both sets function in the same manner as your control pads.
- Joystick function is for left or right and up and down directions.

- * **SELECTOR SWITCH:** Use this switch to engage either set of Fire Buttons. Lift switch to the "UP" position and the LEFT buttons are activated. Push the switch "DOWN" and the RIGHT buttons are activated.

Ultimate Superstick, Dial-A-Speed, and Beeshu are Trademarks of Beeshu Inc.

©1988

WARRANTY

Beeshu, Inc., warrants to the original purchaser, that this joystick will be free of defects in material and workmanship for 90 days from the date of purchase. To validate this warranty, the original purchaser must return the enclosed warranty card within 10 days.

To receive warranty service:

- 1) DO NOT return your defective joystick to the retailer.
- 2) Contact Beeshu Customer Service at 407-877-2100 Service department is available Monday - Friday from 9:00 A.M. to 5:00 P.M. EST.
- 3) Upon obtaining a return authorization number - carefully pack your joystick in a strong box and return it prepaid and insured to Beeshu, Inc., 930 carter Rd winter garden, FL 34787
Please enclose a check or money order for \$5.00 to cover return postage and insurance.

This warranty does not apply to any unit which has been improperly installed, handled, abused, nor to any unit which has been repaired or altered by unauthorized agencies. Under no circumstances will the buyer be entitled to consequential or incidental damages. This limited warranty gives you specific legal rights, you may also have other rights which vary from state to state.

THIS WARRANTY APPLIES ONLY TO EQUIPMENT PURCHASED AND USED IN THE CONTINENTAL UNITED STATES, HAWAII AND ALASKA.