


The

CHEETAH

DISC DRIVE HEAD CLEANER

by VERFIN

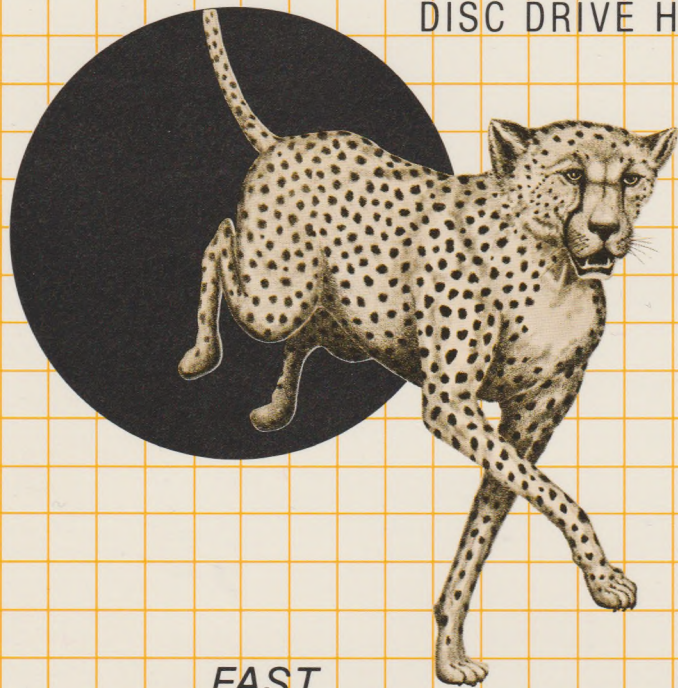

FAST

EFFICIENT

Disc Drive Head Cleaner Discs

MICROCOMPUTER PRODUCTS



DISC DRIVE HEAD CLEANER DISCS

- EASY TO USE—INSERT AS A REGULAR DISC.
- CLEANS AUTOMATICALLY WITHOUT CHEMICALS.
- PROTECTIVE PLASTIC FOLDER PREVENTS CONTAMINATION OF CLEANER
- HANDY LABEL PROVIDES READY RECORD OF USAGE
- FOR USE WITH SINGLE OR DOUBLE SIDED DRIVES

WARRANTY: VERFIN WILL REPLACE, FREE OF CHARGE, THOSE VERFIN CLEANER DISCS FOUND TO BE DEFECTIVE IN MATERIALS OR WORKMANSHIP. VERFIN WILL NOT BE RESPONSIBLE FOR ANY DAMAGES OR LOSSES (including consequential damages) CAUSED BY THE USE OF VERFIN HEAD CLEANER DISCS.

CONTAINS 2—5¼" DISCS.

Made in U.S.A.



DISC DRIVE HEAD CLEANER DISC

INSTRUCTIONS FOR USE

USE WITH SINGLE-SIDE OR DOUBLE-SIDE DISC DRIVES.

1. IT IS **IMPORTANT TO NOTE** THAT THE **VERFIN** DISC DRIVE HEAD CLEANER DISC CAN BE INSERTED INTO YOUR DISC DRIVE WITH THE CLEANER MATERIAL EXPOSED TO EITHER SIDE OF THE DISC DRIVE. IF YOUR DISC DRIVE IS SINGLE-SIDED **BE SURE** THE CLEANING MATERIAL IS EXPOSED ON THE SAME SIDE AS THE DISC DRIVE HEAD WHEN THE CLEANER DISC IS INSERTED. WITH DOUBLE-SIDED DRIVES THE CLEANER DISC MAY BE INSERTED WITH THE CLEANING MATERIAL EXPOSED TO EITHER SIDE.
2. WITH THE **VERFIN** HEAD CLEANER DISC PROPERLY INSERTED, ACTIVATE DRIVE FOR ABOUT 20 SECONDS. TO ACTIVATE DRIVE USE DIRECTORY (DIR) COMMAND OR INITIALIZATION PROGRAM. REPEAT COMMAND IF NECESSARY TO ACHIEVE 20 SECONDS OF DRIVE ACTIVATION.
3. AFTER 20 SECONDS, REMOVE THE **VERFIN** HEAD CLEANER DISC FROM YOUR DISC DRIVE. FOR DOUBLE-SIDED DRIVES TURN THE CLEANER DISC OVER AND REINSERT INTO THE DRIVE. ACTIVATE THE DRIVE FOR 20 SECONDS AND REMOVE THE CLEANER DISC.
4. CHECK OFF THE USAGE ON THE LABEL ON THE **VERFIN** HEAD CLEANER DISC, CHECKING OFF TWICE FOR DOUBLE SIDED DRIVES.
5. EXAMINE THE CLEANING MATERIAL AFTER EACH USE. DISCARD AFTER FIFTEEN USES OR WHEN THE CLEANING MATERIAL BECOMES DISCOLORED.
6. STORE YOUR **VERFIN** DISC DRIVE HEAD CLEANER DISC WHEN NOT IN USE IN THE PROTECTIVE PLASTIC FOLDER TO PREVENT CONTAMINATION OF THE CLEANING MATERIAL. CONTAMINATED CLEANING MATERIAL MAY CAUSE EXCESSIVE HEAD WEAR OR DAMAGE.

VEREIN

DISC DRIVE HEAD CLEANER DISC

USES: 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15
● ● ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○



VEREIN

DISC DRIVE HEAD CLEANER DISC

USES: 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15
● ● ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○

